



Instructions for installing roof boards on houses with 4 walls. (Pyramid hip roof)

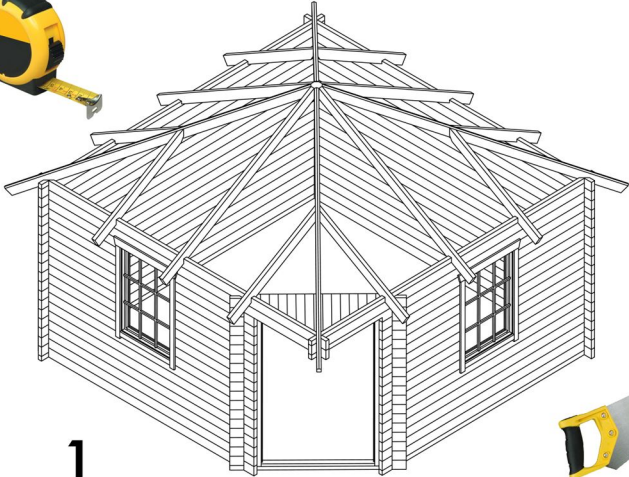


1
measure

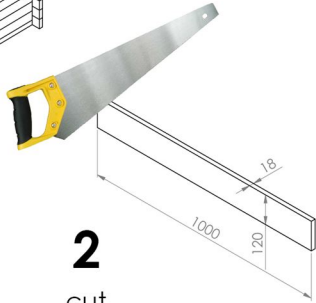


2
cut




3
install

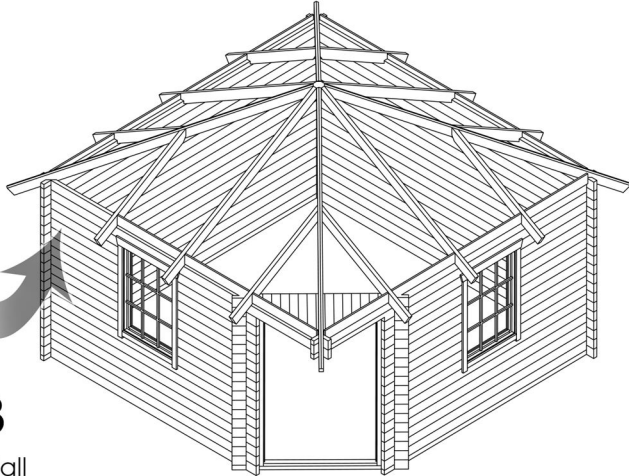

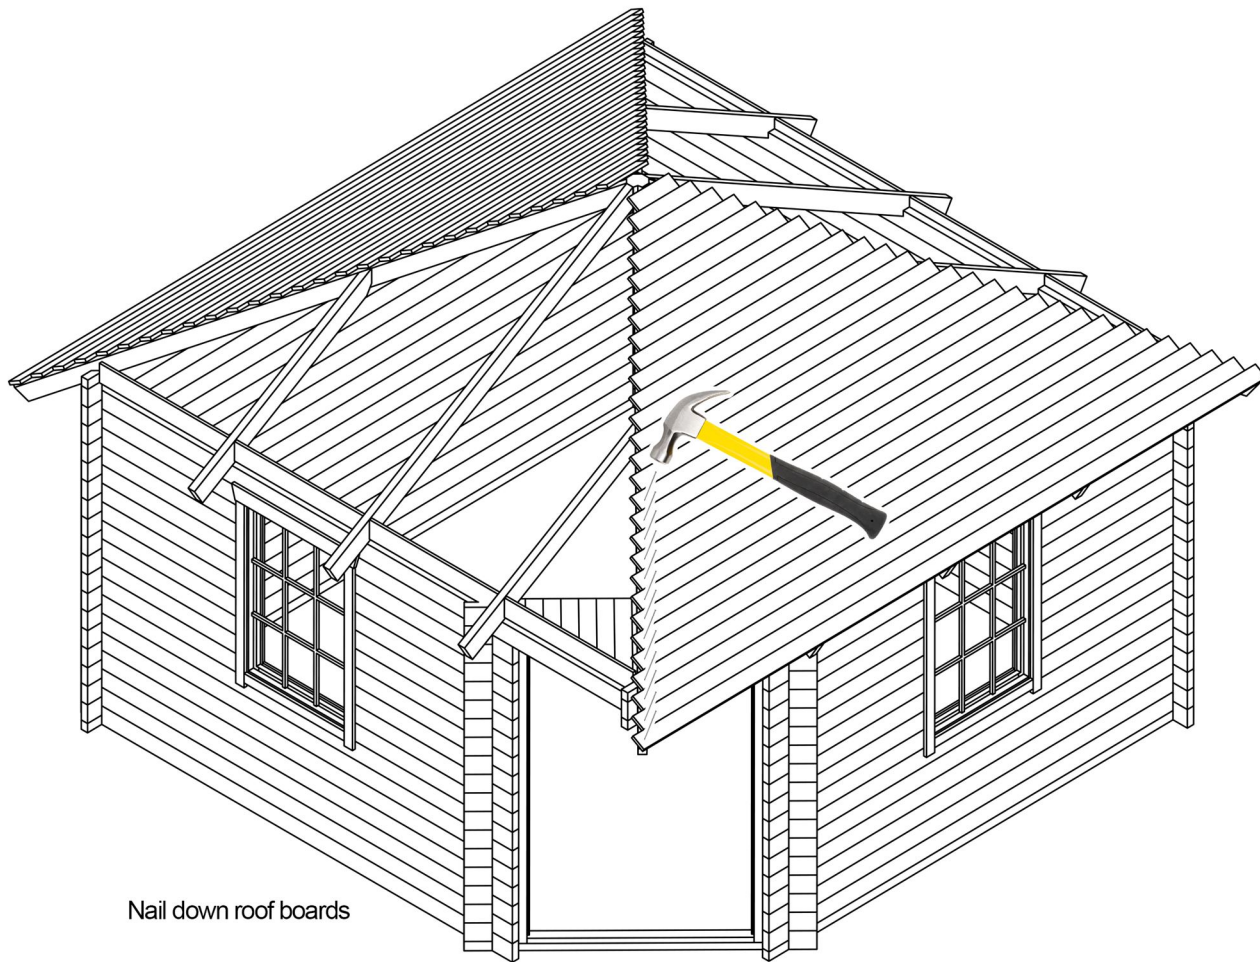

Nail down roof boards

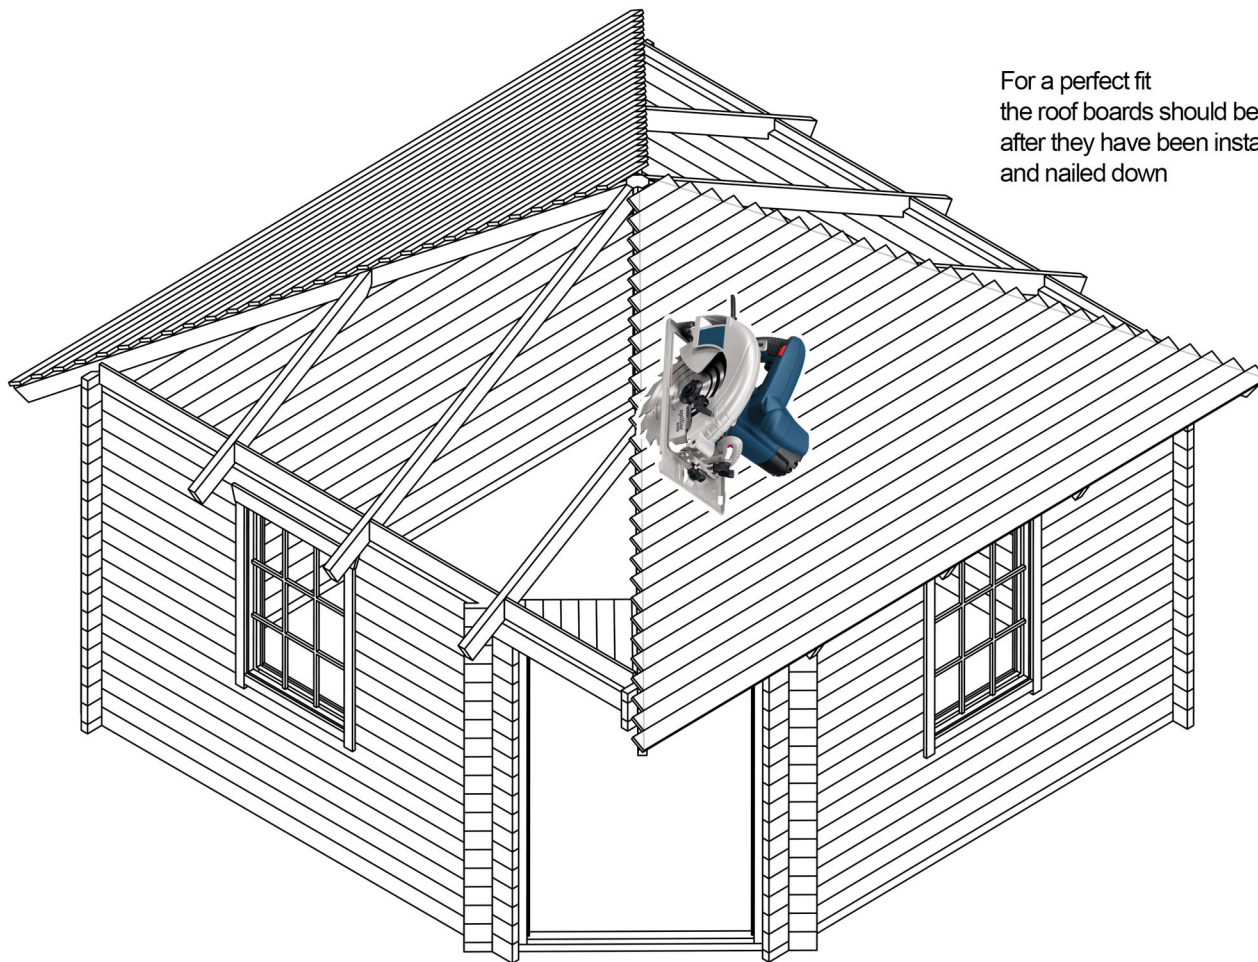

For a perfect fit
the roof boards should be sawn
after they have been installed
and nailed down



Measure triangle dimensions




Mark dimensions on roof boards



Saw roof boards

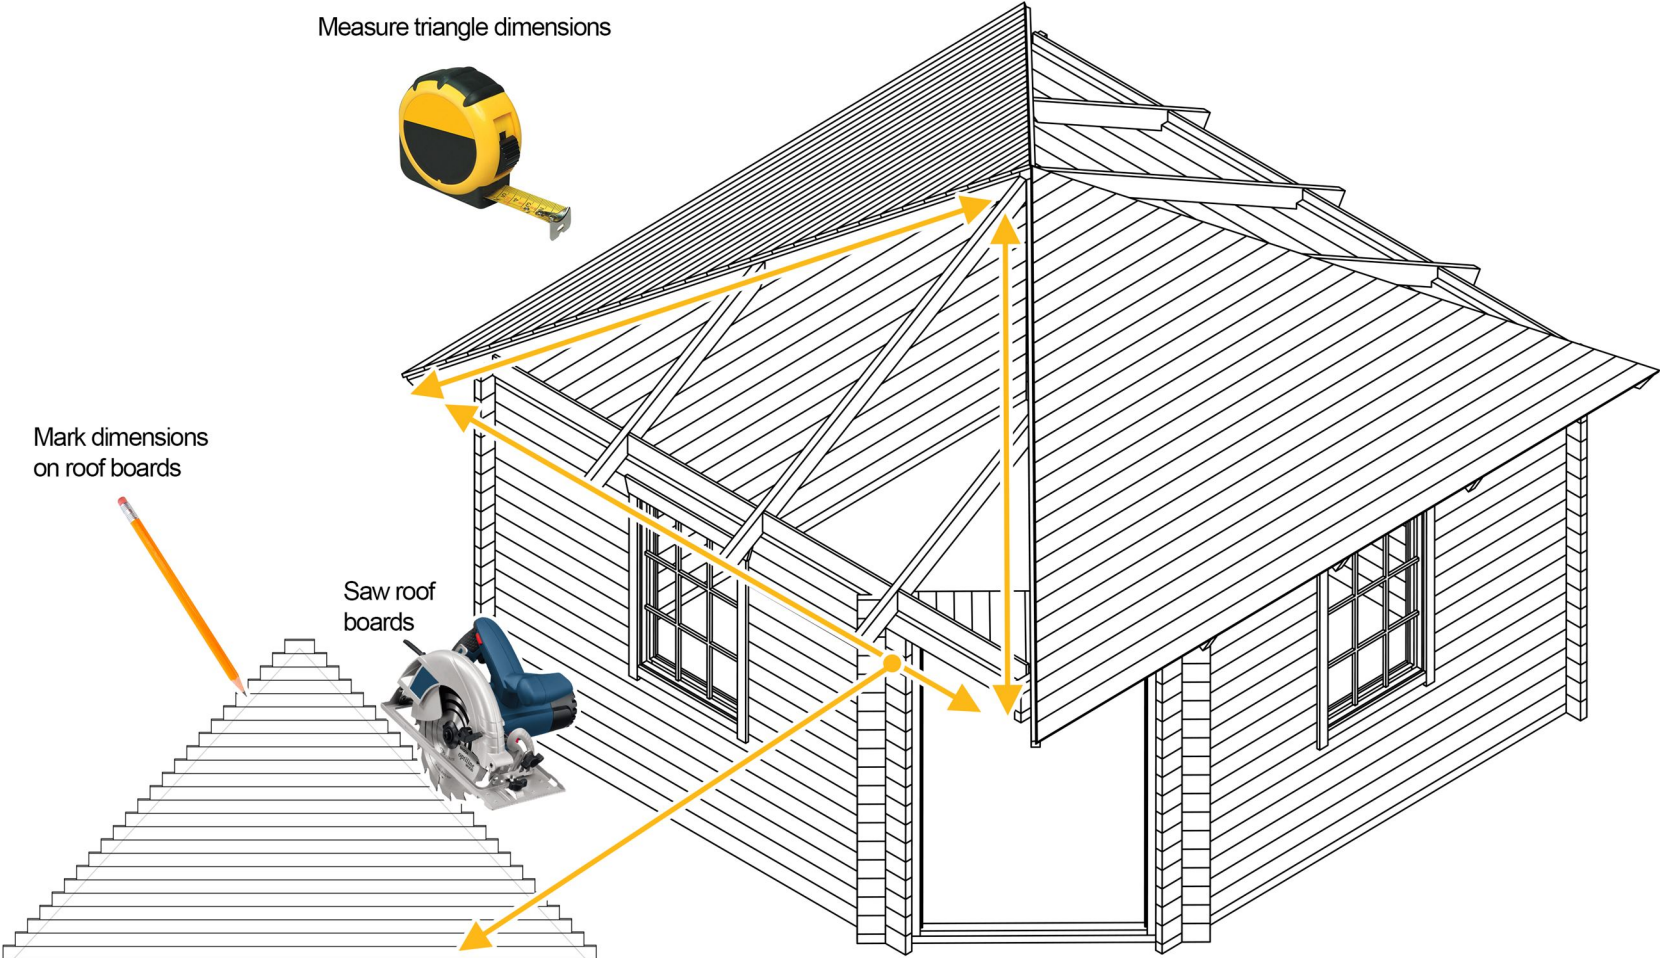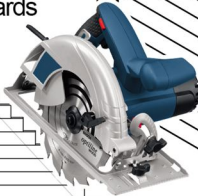

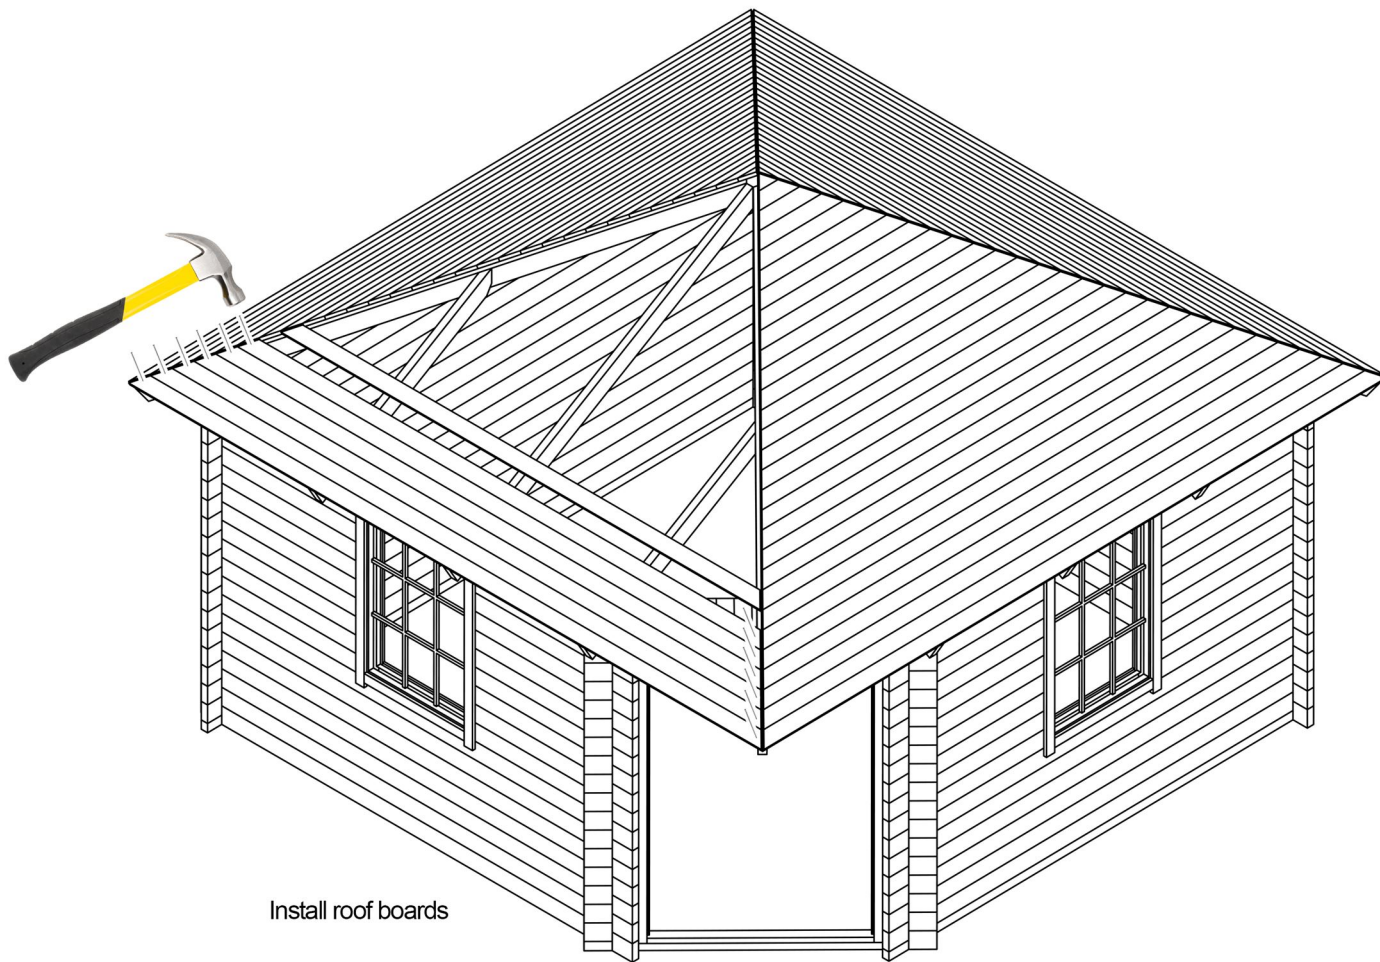



Install roof boards

Install eave boards




4x40

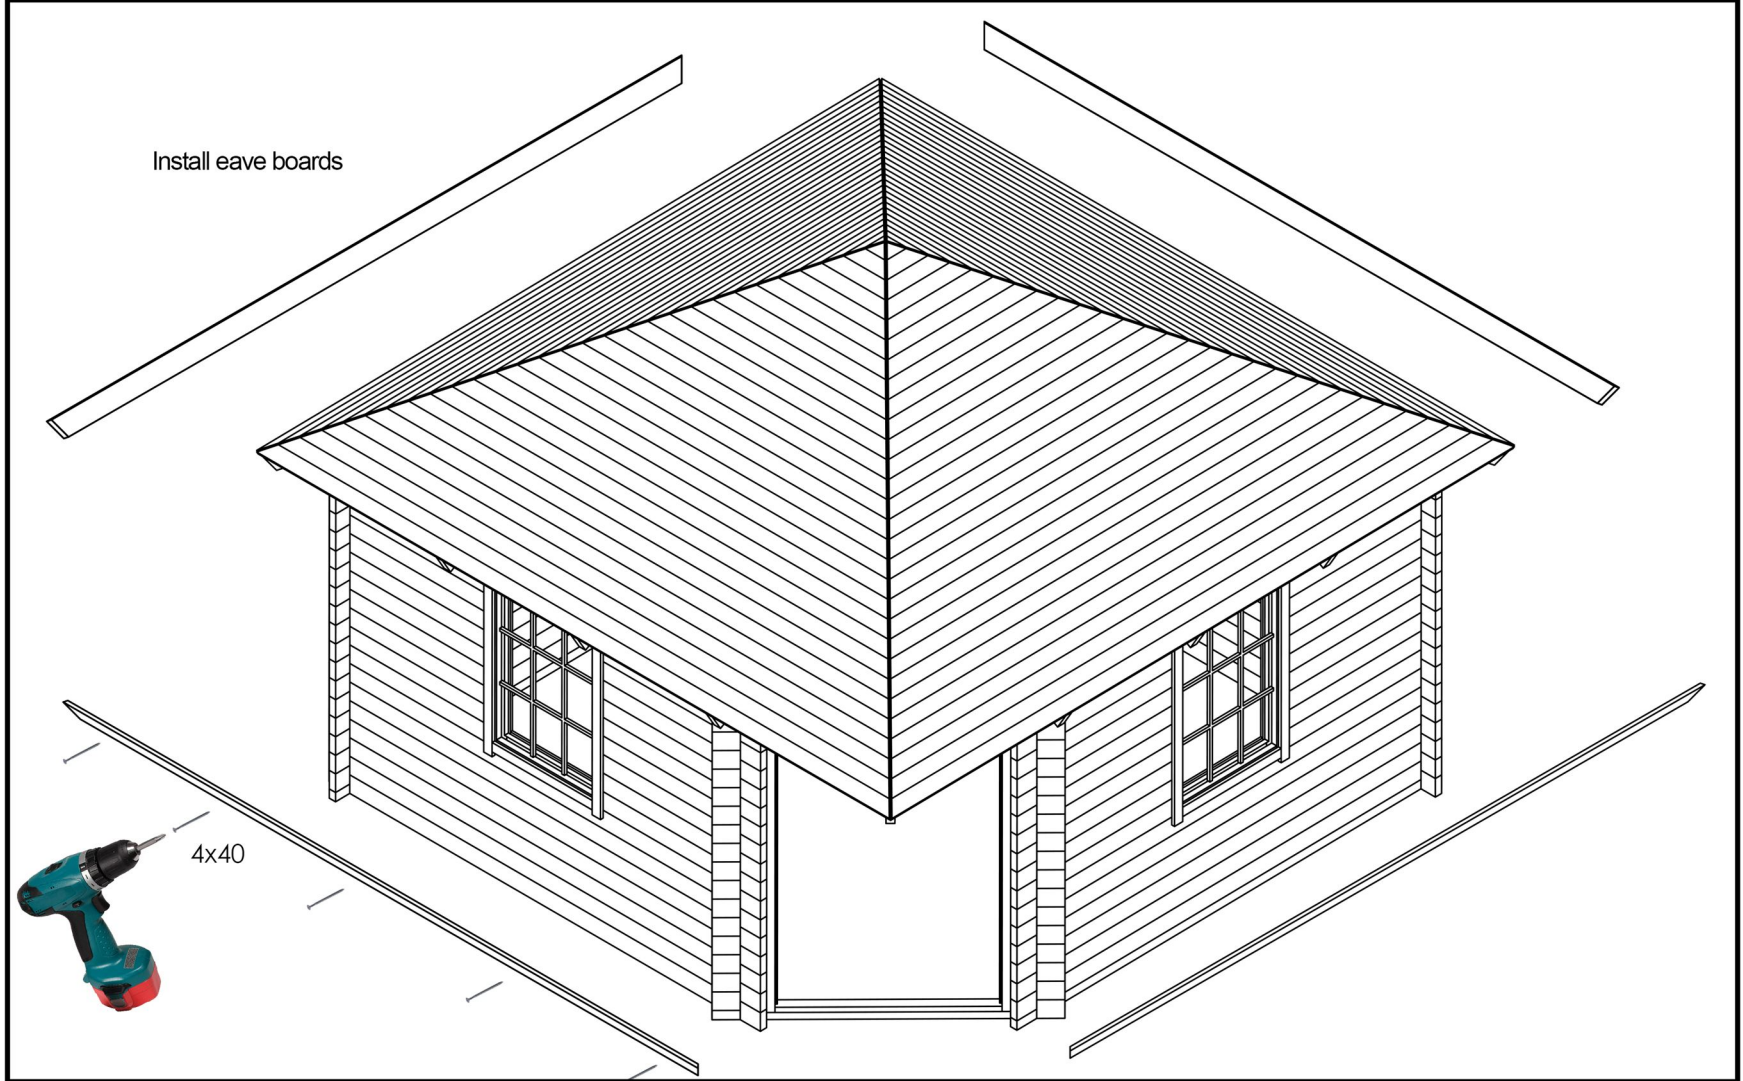

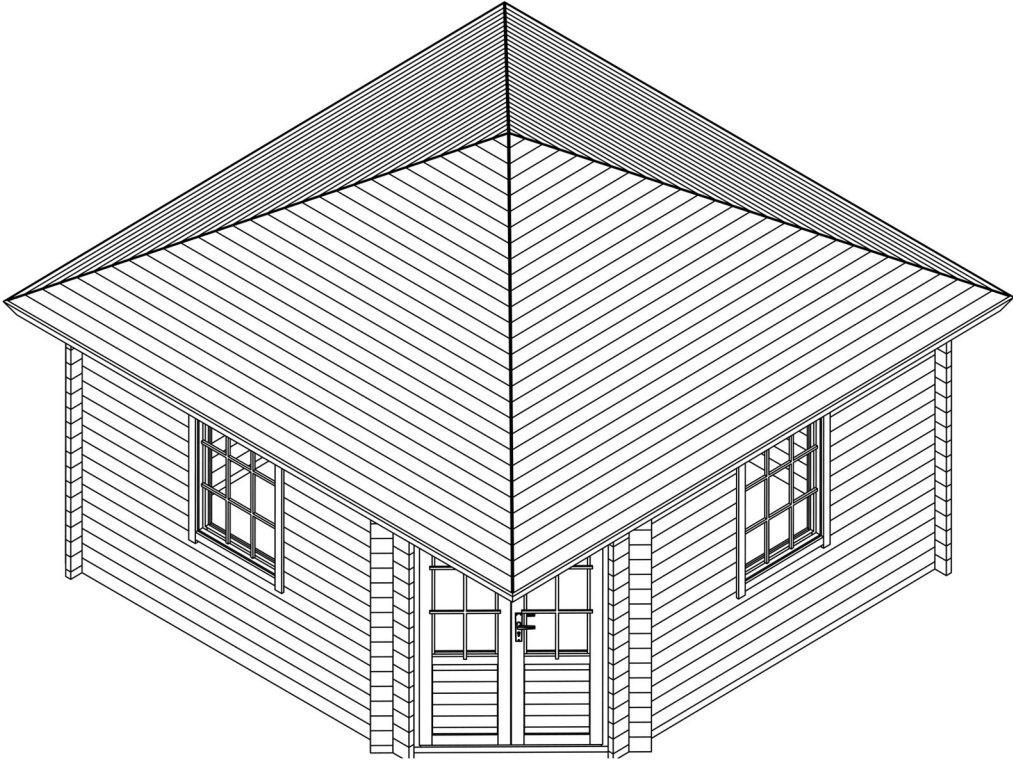


Section view

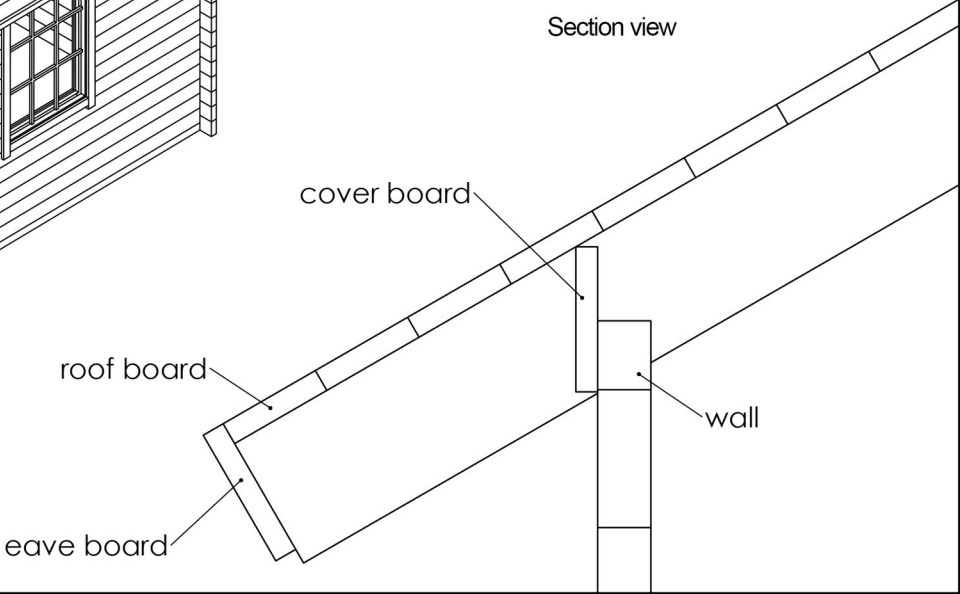


Instructions for installing roof boards on pavillion type garden houses with 6 or 8 walls. (Gazebo hip roof)


Nail down roof boards

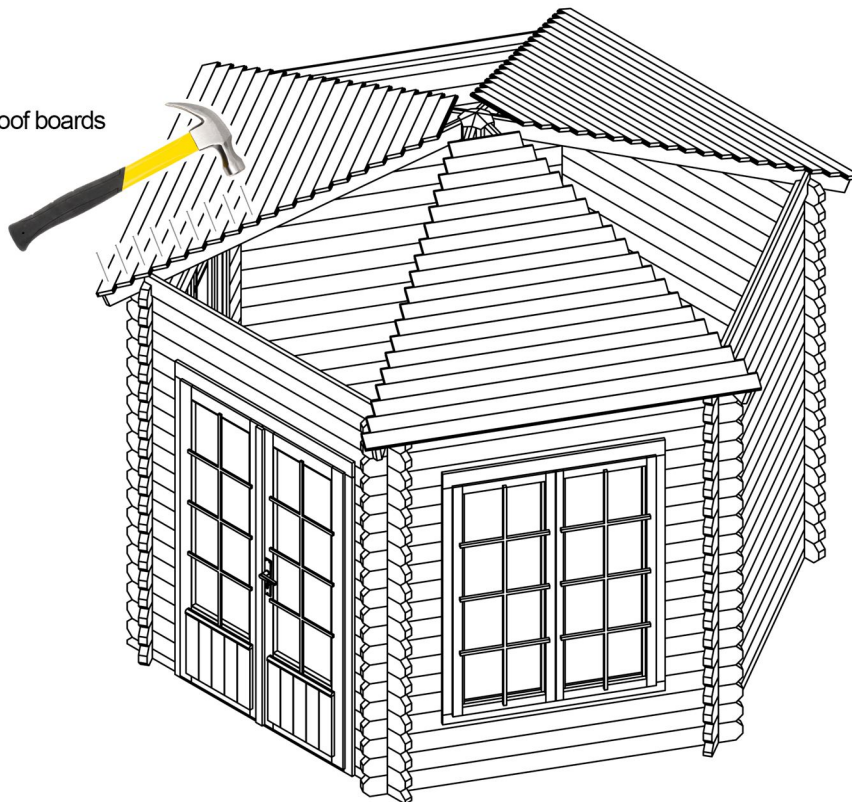


Saw roof boards

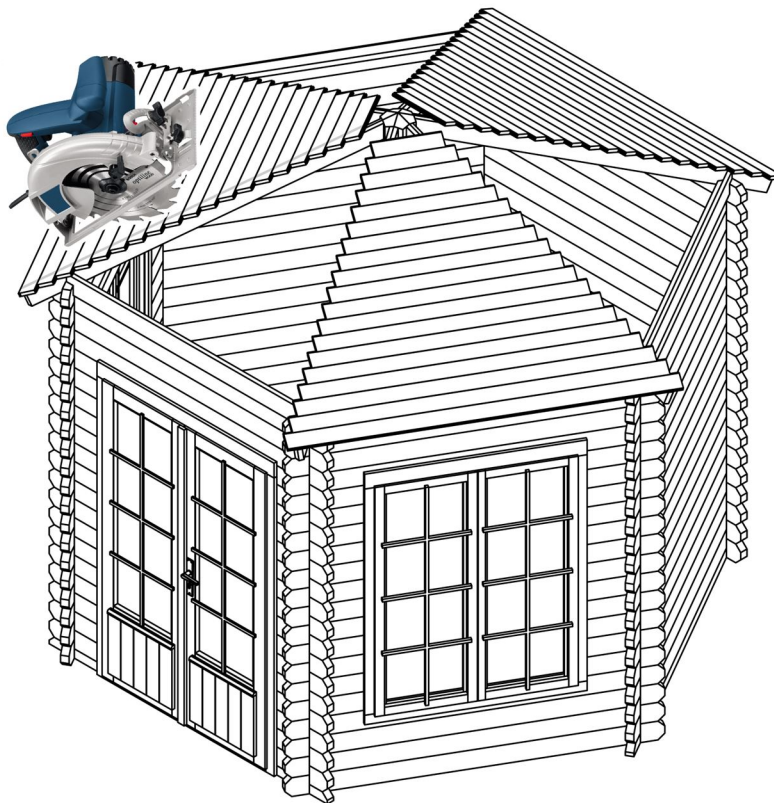

Measure triangle dimensions

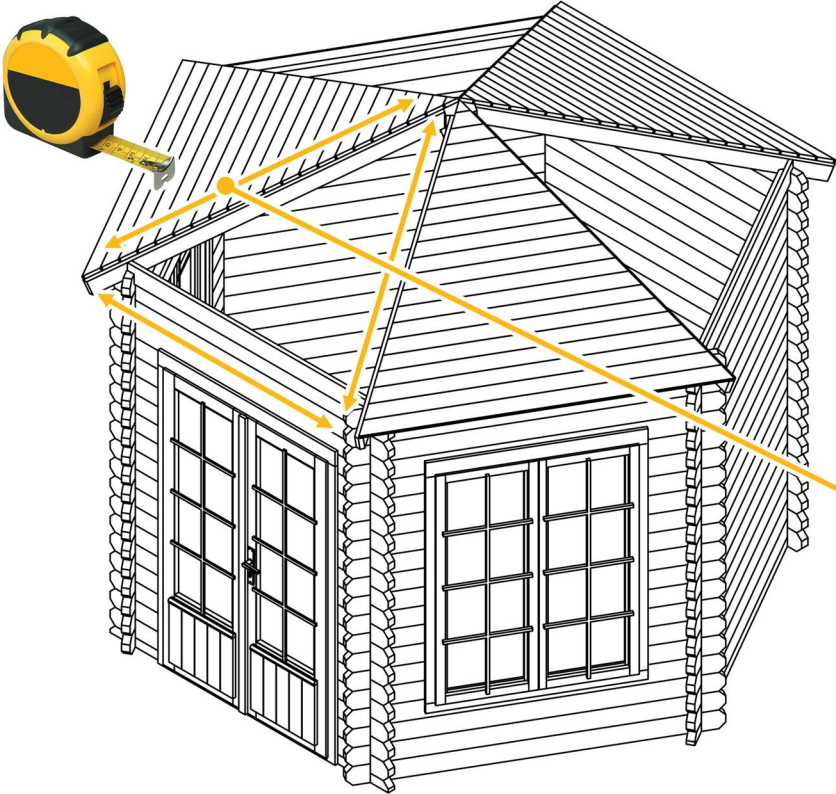

Mark dimensions on roof boards

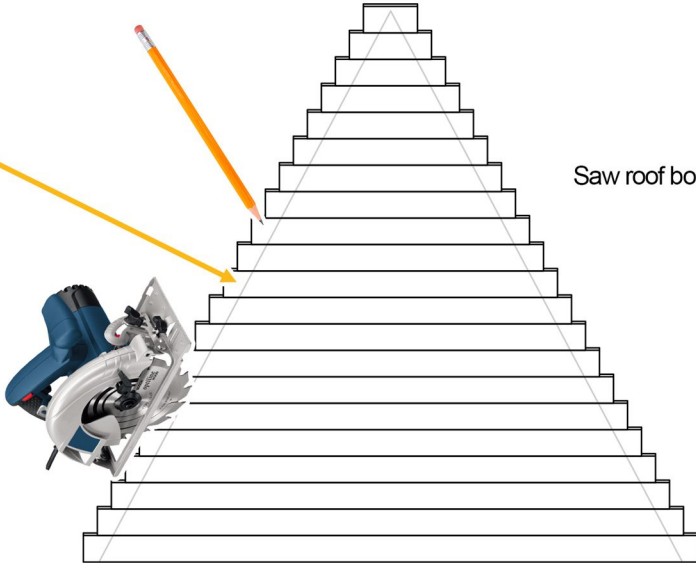

Saw roof boards

Install roof boards

